


感应电动机 INDUCTION MOTORS

■ 200W □104mm

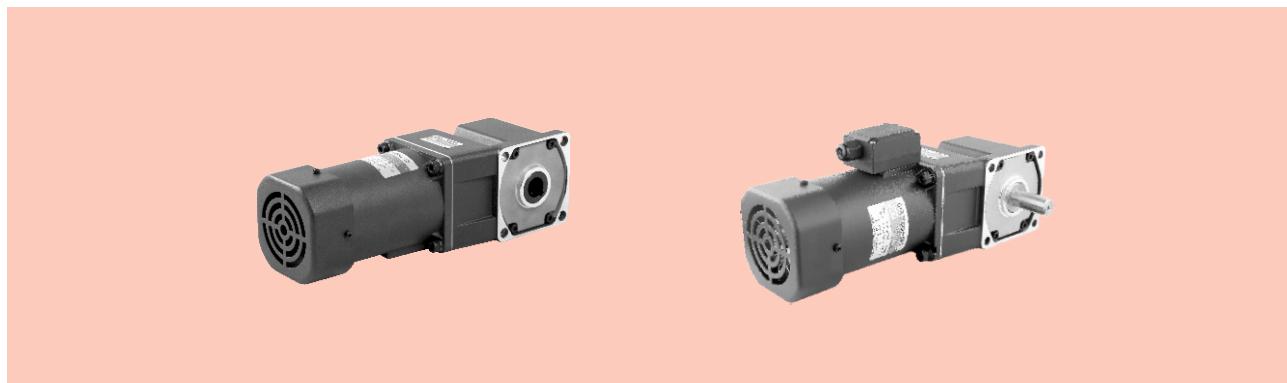

■ 规格 Specs 连续额定 Continuous Rating

型号 Model · 类型 Type 上段:齿轮轴 Upper:Pinion Shaft 下段()内:圆轴 Below:Round Shaft		输出功率 Output power W	电压 Voltage V	频率 Frequency Hz	电流 Current A	启动转矩 Starting Torque mN.m	额定转矩 Rated Torque mN.m	额定转速 Rated Speed r/min	电容器容量 Capacitor μF
导线型 Lead Wire Type	带端子箱型 Terminal Box Type								
6IK200GU-AF	6IK200GU-AFT	200	1ph 100	50	3.20	900	1520	1250	45
				60	3.50		1230	1550	
6IK200GU-EF	6IK200GU-EFT	200	1ph 110	60	2.75	850	1230	1550	35
			1ph 120		2.65				
6IK200GU-CF	6IK200GU-CFT	200	1ph 220	50	1.40	1000	1520	1250	10
			1ph 230						
6IK200GU-HF	6IK200GU-HFT	200	1ph 220	60	1.40	900	1230	1550	10
			1ph 230						
6IK200GU-SF	6IK200GU-SFT	200	3ph 220	50	1.20	3400	1520	1250	-
				60	1.00	2700	1230	1550	
6IK200GU-S3F	6IK200GU-S3FT	200	3ph 380	50	0.69	3400	1520	1250	-
				60	0.58	2700	1230	1550	

- 各种安全规格以电动机铭牌上的型号名取得认证。

When the motor is approved under various safety standards, the model name on the nameplate is the approved model name.

- 注：“-A” 型号中电压为110V时，配置电容器容量以实际铭牌为准。

Note: “-A” it means the voltage 110V, the assembly capacitor value it is according the labe.

■ 装有减速器时的容许转矩 Gear Motor-Torque Table

- 减速器·中间减速器另售。● 电动机型号的□中为表示带端子箱型的记号(T)。

Gearhead and mid-gearbox can be sold separately. Enter the code that represents the terminal box type (T) in the box (□) within the model name.

- 减速器型号的□中为减速比的数值。□色表示与电动机同一方向运转，其他则为相反方向。

Enter the gear ratio in the box (□) within the model name.

The colored background □ indicates the same rotating direction of the motor while the rotating direction of others are opposite.

- 转速是以电动机的同步转速(50Hz:1500r/min、60Hz:1800r/min)为基准除以减速比而算出来的数值。实际转速将随负载大小变化而比所示数值减少2%~20%左右。

The speed is calculated by diving the motor's synchronous speed (50Hz:1500r/min、60Hz:1800r/min) by the gear ratio. The actual speed is 2%~20% less than the displayed value, depending on the size of the load.

- 希望以大于下表的减速比进行进一步减速时，可在电动机与减速器之间安装减速比为10的中间减速器。这时的容许转矩为60N·m。

To reduce the speed beyond the gear ratio in the table, attach a mid-gearbox (gear ratio:10) between the gearhead and motor. In that case, the permissible torque is 60N·m.


弧锥直角 SPIRAL BEVEL RIGHT ANGLE

■ 容许力矩单位 Allowance Torque Unit: 上段 Upside (N.m) / 下段 Belowside (kgf.cm)


机型Type 电动机/减速器 Motor/Gearhead	减速比Gear Ratio 转速Speed r/min	7.5	9	12.5	15	18	25	30	36	50	60	75	90	100	120	150	180
		50Hz	200	166	120	100	83	60	50	42	30	25	20	16	15	12	10
6IK200GU-AF□		9.28	11.1	13.9	16.7	20.1	25.2	30.3	36.3	50.4	60.0	60.0	60.0	60.0	60.0	60.0	60.0
6IK200GU-EF□	6GU□RC	50Hz	94.7	114	142	171	205	257	30.9	370	515	600	600	600	600	600	600
6IK200GU-CF□		60Hz	7.49	8.98	11.2	13.5	16.2	20.3	24.4	29.3	40.7	48.8	60.0	60.0	60.0	60.0	60.0
6IK200GU-HF□	6GU□RT		76.4	91.7	115	138	165	207	249	299	415	498	600	600	600	600	600
6IK200GU-SF□																	
6IK200GU-S3F□																	

电机尺寸图 Motor Size Chart

6IK200GU-AF□/6GU□RC 6IK200GU-CF/6GU□RC 6IK200GU-SF□/6GU□RC
6IK200GU-EF□/6GU□RC 6IK200GU-HF/6GU□RC 6IK200GU-S3F□/6GU□RC

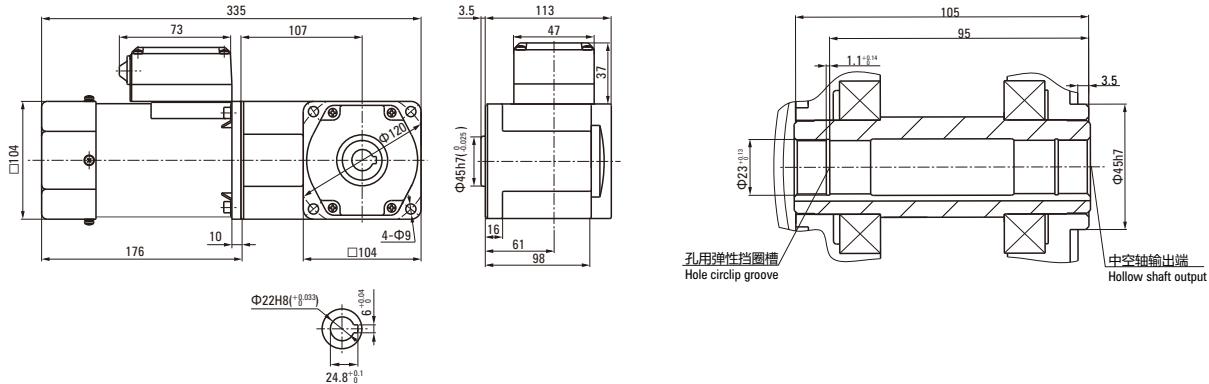

6IK200GU-AF□/6GU□RT 6IK200GU-CF/6GU□RT 6IK200GU-SF□/6GU□RT
6IK200GU-EF□/6GU□RT 6IK200GU-HF/6GU□RT 6IK200GU-S3F□/6GU□RT

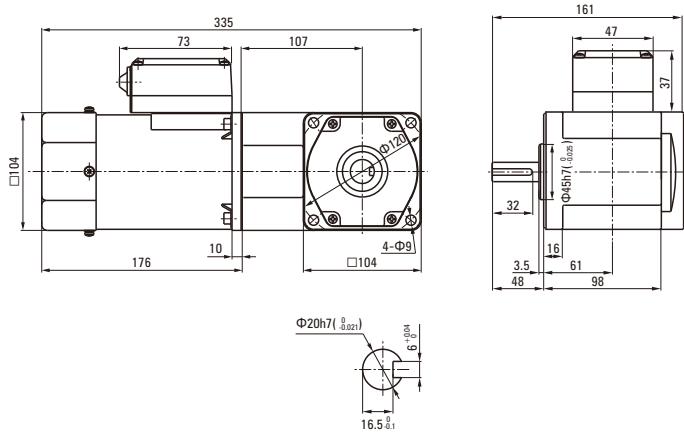

连接图 Wiring Diagram

●运转方向指从电动机轴看来的方向。CW表示顺时针方向，CCW表示逆时针方向。

The direction of motor rotation is as viewed from the shaft end of motor. CW represents the clockwise direction, while CCW represents the counterclockwise direction.

●表中所记品名为齿轮轴型，圆轴型亦同。

Name indicated in the list is pinion shaft type, also valid for the equivalent round shaft type.

导线型 Lead Wire Type		
6IK200GU-AF、6IK200GU-EF、6IK200GU-HF、6IK200GU-CF		6IK200GU-SF(S3F)
<p>顺时针方向CW</p> <p>逆时针方向CCW</p>		<p>顺时针方向CW</p> <p>逆时针方向CCW</p> <p>若对换R、S、T中任意二条，电动机会作逆时针方向运转 To change the rotation direction change any two connections among R, S and T</p>
带端子箱型 Terminal Box Type		
6IK200GU-AFT、6IK200GU-EFT、6IK200GU-HFT、6IK200GU-CFT		6IK200GU-SFT(3FT)
<p>顺时针方向CW</p> <p>逆时针方向CCW</p>		<p>顺时针方向CW</p> <p>逆时针方向CCW</p> <p>若对换U、V、W中任意二条，电动机会作逆时针方向运转 To change the rotation direction change any two connections among U, V and W</p>

请注意 Note:

单相电动机运转方向的转换应在电动机停止后进行。

Change the direction of single-phase motor rotation only after bring the motor to a stop.

若在电动机运转时转换运转方向，可能发生无法转换运转方向或须费时较久的情况。

If an attempt is made to change the direction of rotation while the motor is rotating, motor may ignore reversing command or change its direction of rotation after some delay.